



## **SL-073 ( 7inch off the plug) - USB update Instruction**

### **VIDEO FORMAT SUGGESTED**

BEST FORMAT- XVID FORMAT - 720x480 or 720 x 576, 3000kbps, 25 frame rate. Music : MP3 FORMAT

Please select the below link for the video demo


<http://www.youtube.com/watch?v=FSlzkSTLE5c&feature=plc>

p

1) **TURN ON** THE PLAYER WITH VIDEOS PLAYING INSIDE. IF YOU ARE ON **STANDBY MODE, PLEASE PRESS ANY BUTTON** TO MAKE THE VIDEO PLAY FIRST.



If it comes up with the below menu, it is okay, you may slot in the USB with the contents inside.

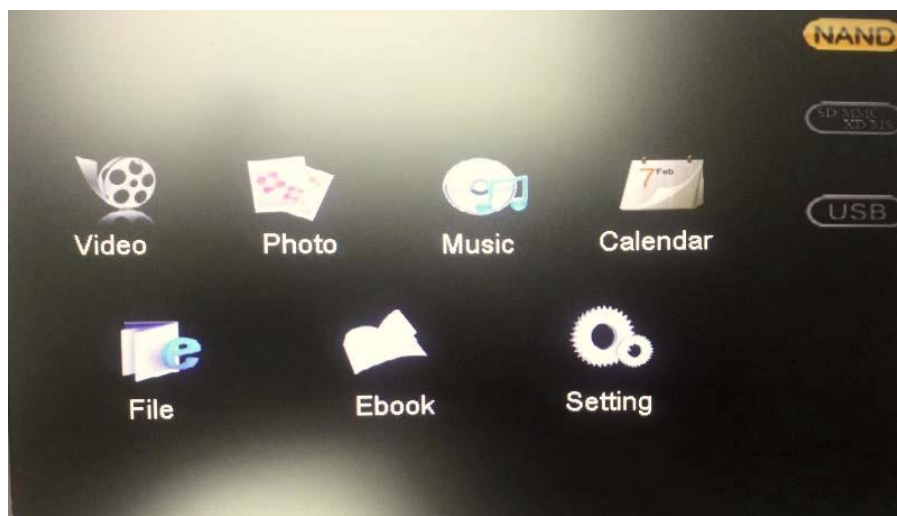

2) WHEN THE VIDEO IS PLAYING, INSERT THE USB WITH VIDEO FILES AND UPDATE TEXT FILE INSIDE.

IF IT IS IN THE MENU PAGE AS ABOVE, SAME, INSERT THE USB WITH VIDEO FILES AND UPDATE FILE INSIDE.

-YOU ARE REQUIRED TO PUT THE FILE "**UPDATE.TXT**" AND NEW CONTENTS ( VIDEOS) INTO THE USB INORDER TO UPDATE.

- THE VIDEO FILES SHOULD BE IN THE FORMAT OF XVID- 720X576 RESOLUTION. ONLY VIDEOS ARE ALLOWED

-YOU MUST NAME THE FILES AS **0,1,2,3,4,5**. e.g.

**0.mpg**

**1.mpg**

**2.mpg**

**3.mpg**

**4.mpg**

**5.mpg**

**And add the file "update.txt" to upload**

EVEN IF YOU HAVE 4 BUTTONS OF VIDEO, YOU MUST PUT 5 VIDEOS. **FILE 0 AND FILE 1** COULD BE THE SAME FILE BUT WITH A DIFFERENT NAME.

- THE **UPDATE.TXT** FILE IS A FILE TO PROTECT OTHER USERS FROM LOADING UNKNOWN CONTENTS INTO THE PLAYER.

**HOW TO CREATE UPDATE.TXT ? ( PLEASE ASK THE SALES FOR IT) .**


-CREATE A TEXT FILE AND NAME IT " update"- you must then input letters or numbers inside e.g. "12245677889"

- Save it , then put in the USB stick together with the new contents to uploading process.


Wait for around 3-5 minutes




3. Please do the below of reading the USB stick

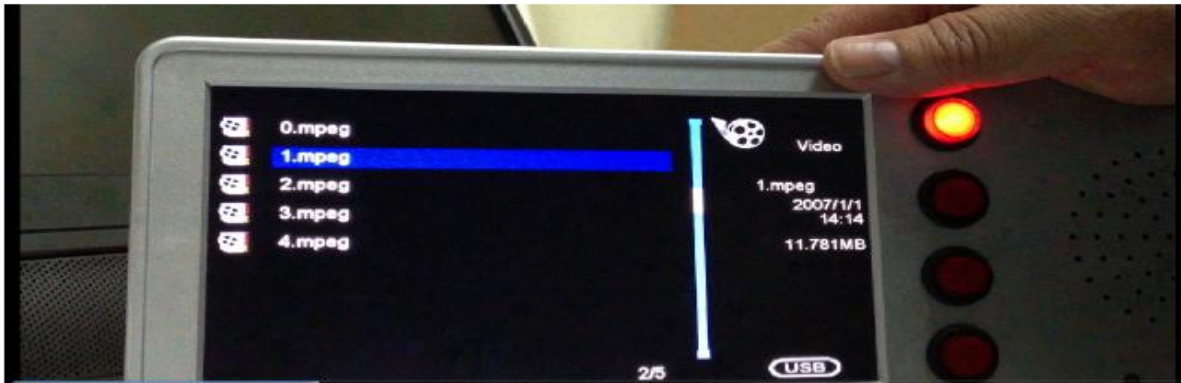

4) Show that it is copying. Wait till it is finished.

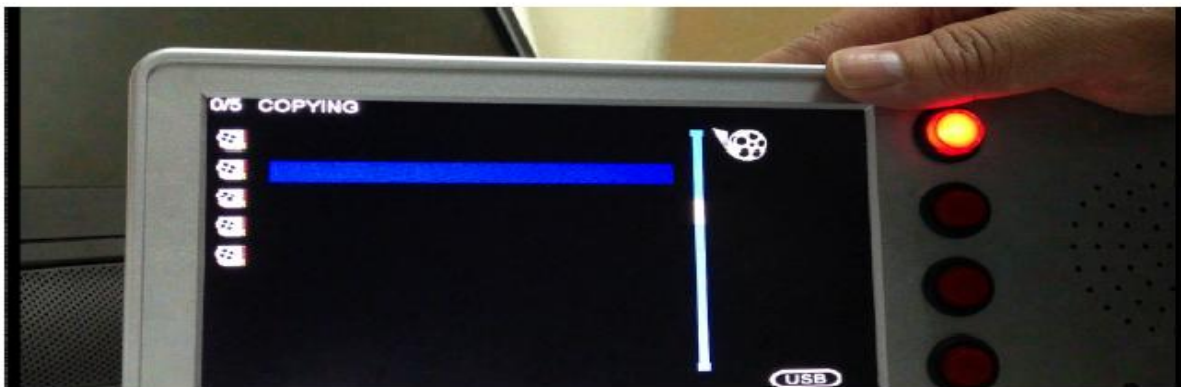

5) Then, take the USB out

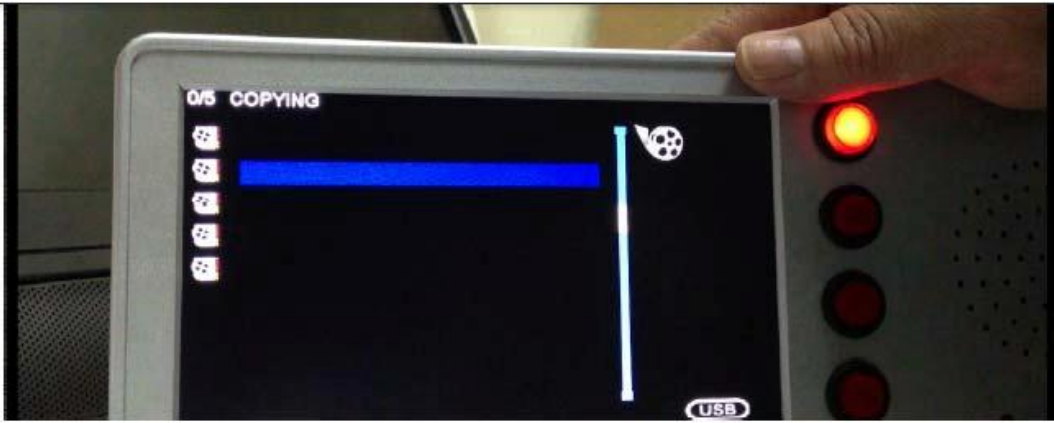

6) Restart the player

6) Then select to the mode of either standby/off/ on. Depending on the mode that you would like to play.

STANDBY - is the energy saving mode, which means that the buttons would be flashing with a black screen, and only play when you select the button. You would usually select this mode when you are playing with batteries.

ON- means that the first video would loop continuously and would please the file when you select the button and then go back to the loop file ( 1st file)

